




## Instructions

12004

**Questions? Contact us at [www.klockit.com/support](http://www.klockit.com/support)**

# Chime Movement Instructions

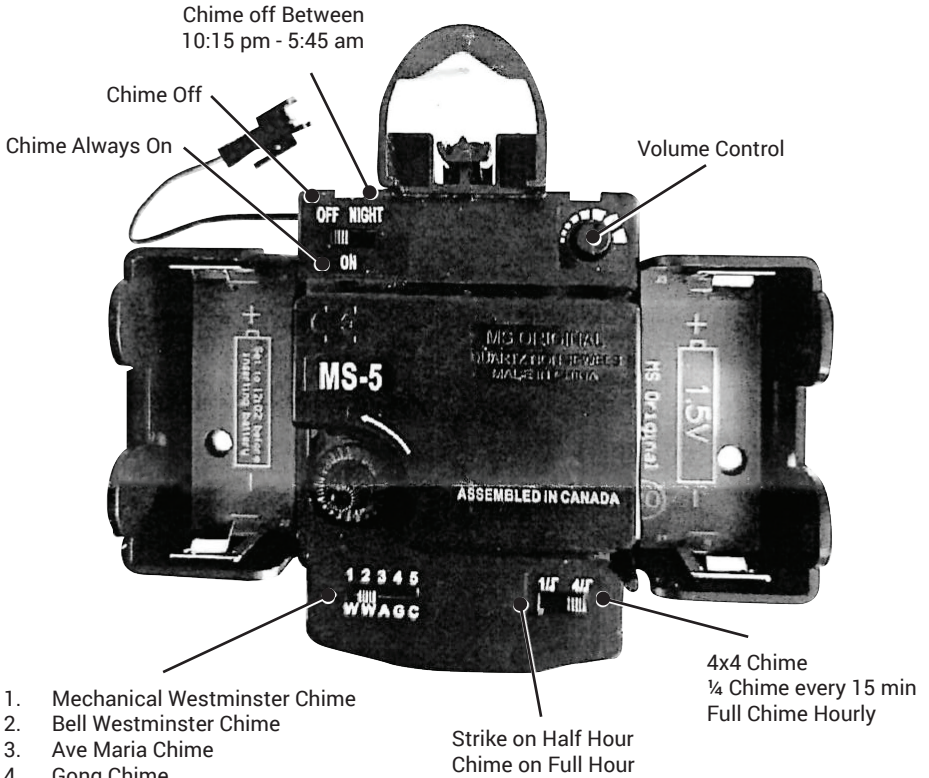

1. Mechanical Westminster Chime
2. Bell Westminster Chime
3. Ave Maria Chime
4. Gong Chime
5. Christmas Songs
  - Wish you a Merry Christmas
  - Jingle Bells
  - It's the Season
  - Rudolph the Red Nose Reindeer

1. Set chime ON
2. Position hands to 12:02
3. Insert the batteries and let the clock chime 12 times
4. Set the clock to your time

## When Setting Clock to NIGHT MODE

If clock still chimes after 10 pm, move time 12 hours ahead to calibrate NIGHT MODE.